


## SafeFix pin system

The patented SafeFix pin system is a one step "insert and snap" method to assemble *MODULO*<sup>®</sup> platform components. The slotted pin is fixed in place by a spring mounted on the stirrup or U-frame.

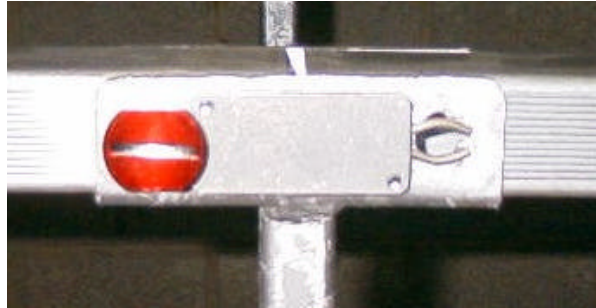

### Insertion:

- Line the pin up with the hole, so that the slot at the base of the pin is horizontal.
- Push the pin in from outside until the spring clicks in the grooves on the shaft of the pin. If required, rotate the pin till the slot is horizontal and the springs are in place.
- Make sure the pin is secured.



### Removal:

- Rotate the pin ¼ turn till the slot is vertical (and the springs are no longer in the grooves) and pull the pin out.

**Note:** The pin can be positioned with the use of a hammer and a screwdriver.


**ATTENTION:** Lifespan of springs: Springs have to be replaced when they no longer exert pressure on the grooves of the pin shaft.

## MOUNTING INSTRUCTIONS *MODULO*<sup>®</sup> PLATFORM

CONFORM TO EUROPEAN NORM EN1808



The modular design of the *MODULO*<sup>®</sup> suspended platform allows you to modify the configuration of the standard components to obtain the size platform required. These components are secured together by using the patented SafeFix pin system.

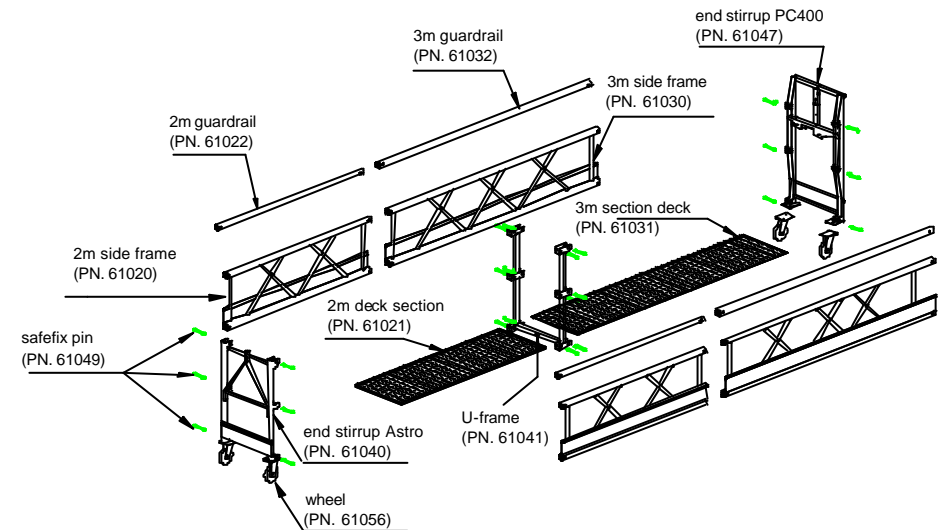

**Note:** Select the correct stirrup for use either with Astro or PC400/500 hoist.

Reference: 38760-E	Issue Date: 21-Aug-2002	Revision: A	Pages: 4
--------------------	-------------------------	-------------	----------



Tel: +32-3-451.05.00

E-mail: [Info@PowerClimber.be](mailto:Info@PowerClimber.be)  
Website: [www.PowerClimber.be](http://www.PowerClimber.be)

Fax: +32-3-451.05.01

*This document and all copies are the property of Power Climber BVBA. All dimensions and date are indicative only.  
The user must insure that the equipment complies with local rules and regulations.*

# Mounting

## 1) U-frames & side frames

- Begin assembly by mounting the side frames on the U-frames.
- Secure each side frame to the U-frame with 2 SafeFix pins on each side. (SafeFix pins, see last page)



## 2) End-stirrup

- Mount the end-stirrup as shown, once all the U-frames and side frames are in place.
- Secure each side frame to the end stirrup with 2 SafeFix pins. (SafeFix pins, see last page)



## 3) Floor

- Put in floor (flat side up) as shown.
- Check that all 4 retaining springs are in place.



### **NOTE:**

To remove floor, push on the spring and lift floor at the same time.



## 4) Guard rails

- Mount guard rails, inserting a SafeFix pin in each end. (SafeFix pins, see last page)



## 5) Wall Rollers

- Loosen screws to insert the wall rollers in the grooves of the side frame.
- NOTE:**  
The wall roller can be located anywhere along the length of the side frame as required.

